

Wybór prądu ładowania zależy od pojemności nominalnych podłączonej baterii akumulatorów.

Zbyt duży prąd ładowania spowoduje uszkodzenie akumulatorów i spadek ich użyteczności.

Mały prąd ładowania wydłuża czas ładowania. Jako optymalny prąd ładowania przyjmuję się 0,1 pojemności.

Aby dokonać modyfikacji, należy ściągnąć pokrywę obudowy i znaleźć płytkę sterującą. Z powodu niebezpieczeństwa porażenia prądem elektrycznym, po otwarciu obudowy wszelkie modyfikacje może dokonać tylko przeszkolony elektryk z uprawnieniami elektrycznymi i mającym zgodę serwisu producenta. Zwykły użytkownik nie może tego zrobić.

Charger current value need to be suitable to the connected AGM batteries string.

Too big charger current will destroy AGM batteries.


To small charger current will charge batteries longer. Optimal charger current is 0,1 capacity.

To make charger current modification, necessary is to open the case of UPS. Because of this reason, it's only can be done by qualified electrician. Users can not to do it alone.

MODEL

Model:	Wartość domyślna: Default:	Możliwość wyboru: Available
RTS-ON-1k0-2U-LCD-BC36	36V/6A	3A/6A
RTS-ON-2k0-2U-LCD-BC72	72V/6A	3A/6A
RTS-ON-3k0-2U-LCD-BC96	96V/6A	3A/6A
TS1-ON-1k0-MC-BC36	36V/6A	3A/6A
TS1-ON-2k0-MC-BC72	72V/6A	3A/6A
TS1-ON-3k0-MC-BC96	96V/6A	3A/6A


0	Jumper not connected	Brak jumpera
1	Jumper connected	Jumper zwarty

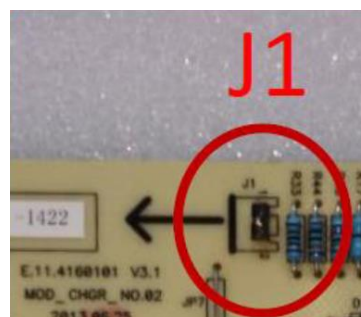

MODEL

Model:	Wartość domyślna:	Możliwość wyboru:
	Default:	Available:
RTS11-ON-6k0-3U-LCD-BC192	8A	1A/3A/5A/8A
RTS11-ON-10k0-3U-LCD-BC192	8A	1A/3A/5A/8A
TS11-ON-6k0-MC-LCD-BC192	8A	1A/3A/5A/8A
TS11-ON-10k0-MC-LCD-BC192	8A	1A/3A/5A/8A


0	Jumper not connected	Brak jumpera
1	Jumper connected	Jumper zwarty

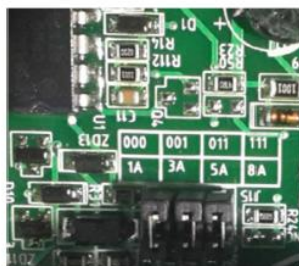


8A



5A

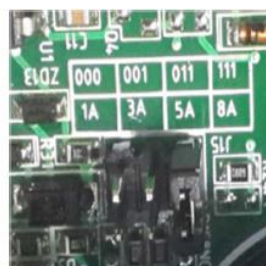

3A

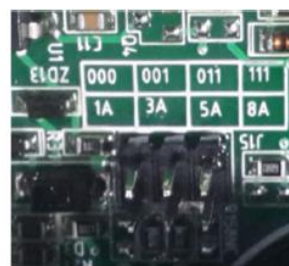

1A

Jumper set	Charger ładowarka
000	1A
001	3A
011	5A
111	8A